


ILLUSTRATED PARTS SUPPLEMENT

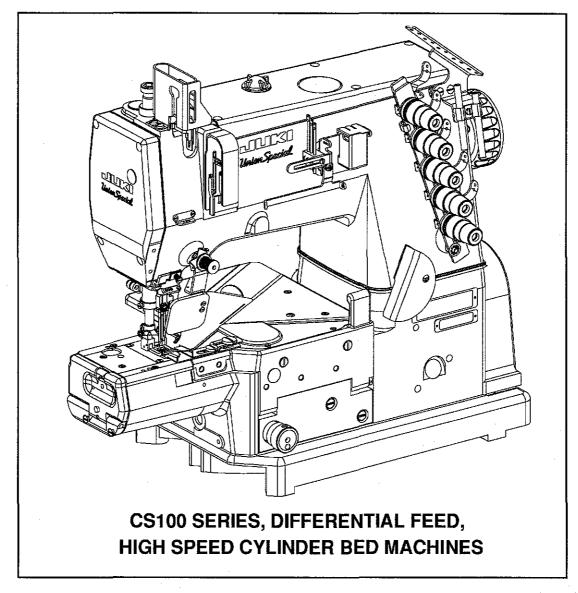

MANUAL NO. PT9609 STYLES CS122H21 CS132H21

Supplement PT9609 Supplement to Manuals PT9425 & OP9637

Fourth Edition Copyright 1997 by Union Special Corporation Rights Reserved In All Countries Printed in U.S.A. August 1997

PREFACE

This parts supplement has been prepared to assist you in locating NEW individual parts or assemblies on the C\$100 Series machines. It can be used in conjunction with Union Special Parts Manual PT9425, Operator's Manual OP9637, and Engineer's Manual EN9424.

It is the desire of Union Special that each machine run at its optimum performance. Parts listed in this manual are designed specifically for your machine and are manufactured with utmost precision to assure long lasting service.

This manual has been comprised on the basis of available information. Changes in design and/or improvements may incorporate a slight modification of configuration in illustrations or part numbers.



SAFETY RULES

- Before putting the machines described in this manual into service, carefully read the instructions. The starting of each machine is only permitted after taking notice of the instructions and by qualified operators.
 - IMPORTANT! Before putting the machine into service, also read the safety rules and instructions from the motor supplier.
- 2. Observe the national safety rules valid for your country.
- 3. The sewing machines described in this instruction manual are prohibited from being put into service until it has been ascertained that the sewing units which these sewing machines will be built into, have conformed with the EC Council Directives (89/392/EEC, Annex II B).

Each machine is only allowed to be used as foreseen. The foreseen use of the particular machine is described in paragraph "STYLES OF MACHINES" of this instruction manual. Another use, going beyond the description, is not as foreseen.


- 4. All safety devices must be in position when the machine is ready for work or in operation. Operation of the machine without the appertaining safety devices is prohibited.
- 5. Wear safety glasses.
- 6. In case of machine conversions and changes all valid safety rules must be considered. Conversions and changes are made at your own risk.
- 7. The warning hints in the instructions are marked with one of these two symbols:





- 8. When doing the following the machine has to be disconnected from the power supply by turning off the main switch or by pulling out the main plug:
 - 8.1 When threading needle(s), looper, spreader etc.
 - 8.2 When replacing any parts such as needle(s), presser foot, throat plate, looper, spreader, feed dog, needle guard, folder, fabric guide etc.
 - 8.3 When leaving the workplace and when the workplace is unattended.
 - 8.4 When doing maintenance work.
 - 8.5 When using clutch motors without actuation lock, wait until the motor is stopped totally.
- Maintenance, repair and conversion work (see item 8) must be done only by trained technicians or special skilled personnel under consideration of the instructions.
- 10. Any work on the electrical equipment must be done by an electrician or under direction and supervision of special skilled personnel.
- 11. Work on parts and equipment under electrical power is not permitted. Permissible exceptions are described in the applicable sections of standard sheet DIN VDE 0105.
- 12. Before doing maintenance and repair work on the pneumatic equipment, the machine has to be disconnected from the compressed air supply. In case of existing residual air pressure after disconnecting from compressed air supply (i.e. pneumatic equipment with air tank), the pressure has to be removed by bleeding.




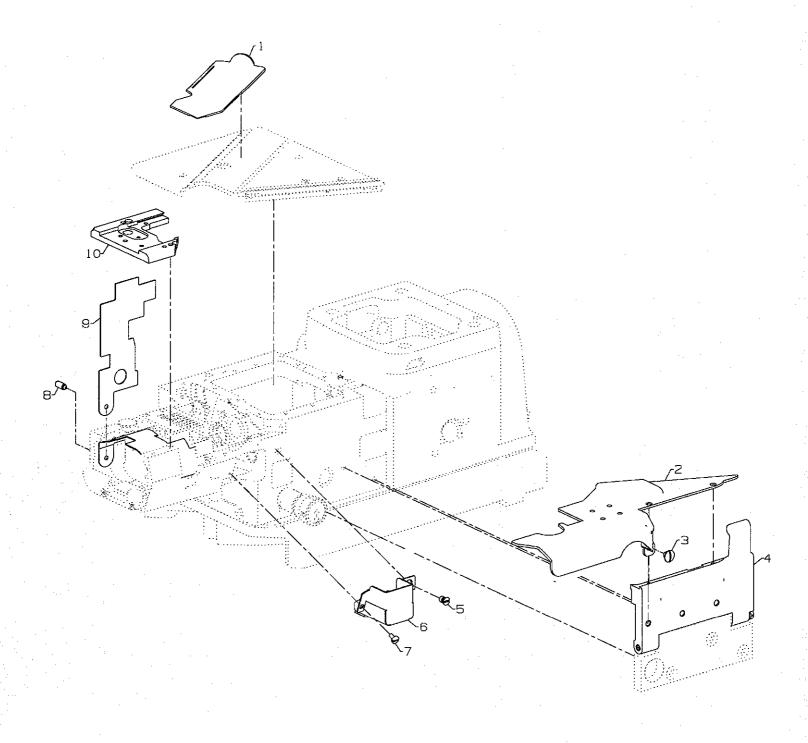

COVERS

ef.			Amt.
No.	Part No.	Description	Req.
1.	50302A	Slide Cover	1
2.	50301BX	Cloth Plate, Front	1
3.	22730	Screw	1
4.	29476TA	Swing Out Cloth Plate Support	1
5.	22807	Screw	1
6.	50382JF	Guard	1
7.	98A	Screw	1
8.	22597	Screw	1
9.	50396F	Splash Guard	
10.	34380T	Throat Plate Support	
- '	96527	Parallel Pin (not shown)	




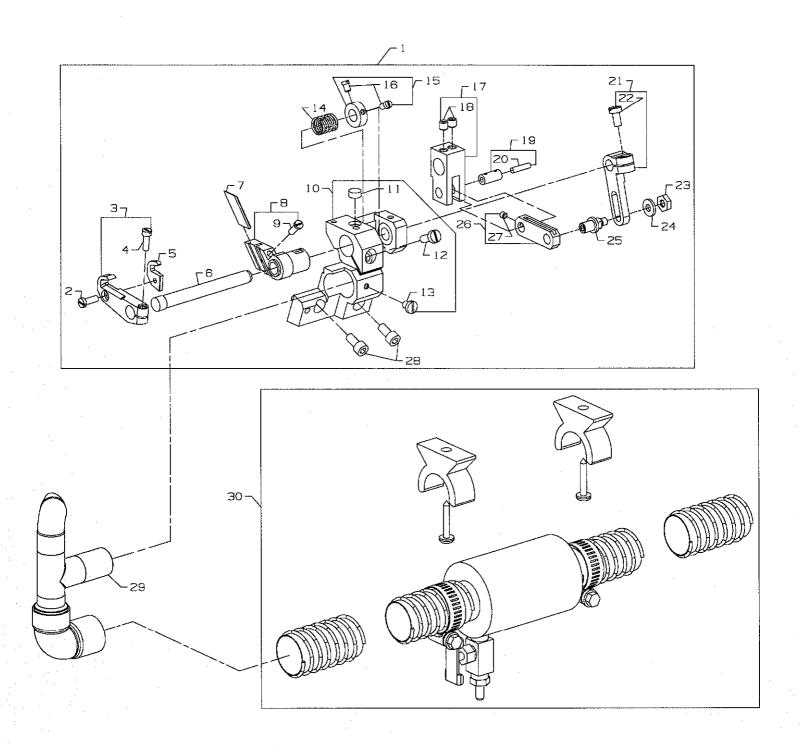

FABRIC TRIMMER ASSEMBLY

Ref.		~	Amt.
No.	Part No.	Description	Req.
1.	29924L	Fabric Trimmer Assembly	1
2.	HS24C	Screw	1
3.	34771RL	Knife Lever	1
4.	22729	Screw	1
5.	34770EL	Upper Knife	. 1
6.	34785L	Shaft	
7.	34749EL	Lower Knife	. 1
8.	34750PL	Lower Knife Holder	1
9.	22729AB	Screw	1
10.	34739L	Support Block	1
11.	34739M	Stop	. 1
12.	93	Screw	. 1
13.	25CC	Screw	. 1
14.	97005D	Spring	1
15.	33688	Adjusting Collar	1
16.	22564D	Screw	. 2
17.	34771SL	Lever	. 1
18.	22894C	Screw	. 2
19.	34336P	Link Pin	. 1
20.	666-149	Oil Wick	. 1
21.	34771VL	Lever,	1
22.	22528	Screw	. 1
23.	9937	Hex Nut	. 1
24.	4611U	Washer	. 1
25.	34771UL	Adjusting Bolt	. 1
26.	34771TL	Connecting Link	
27.	22894Y	Set Screw	
28.	95412	Screw	
29.	671B115	Suction Tube	
30	29480AWK	Exhaust Assembly	1



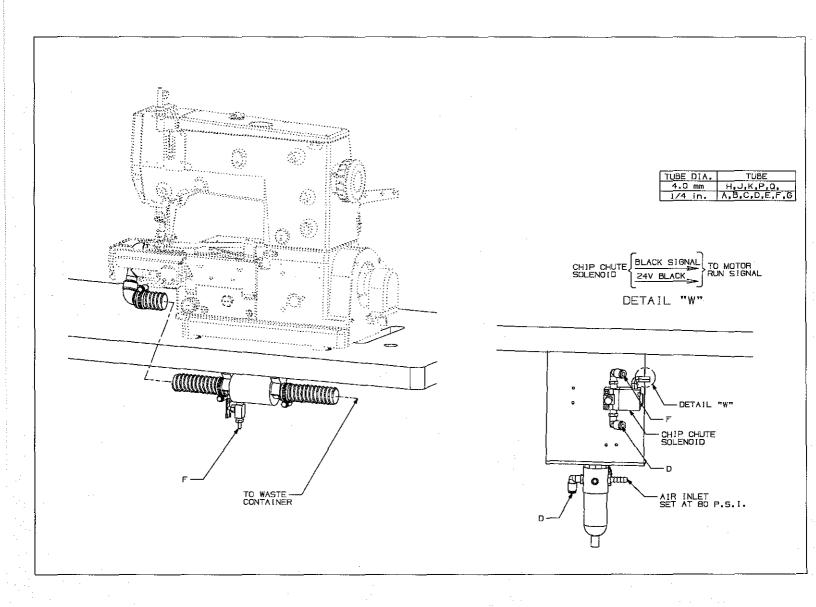




ALL RIGHTS RESERVED IN ALL COUNTRIES PRINTED IN U.S.A. AUG

C8_H21_9EVING	coun	ALL RIGHTS RESER	RVED IN ALL COU	NTRIES PRINTED	IN U.S.A. AUGU	ST 1996	
SUB CLASS	SEWING COMB.	MODEL	NEEDLE HEAD	PRESSER FOOT	THROAT PLATE	FEED DOG MAIN	FEED DOG DIFFERENTIAL
[]	CH21-2A40	CS122H21-2A40	50318AD40		34724FR40		
	CH21-2C40	CS122H21-2C40	3031070	503208640	34724FT40		
	CH21-2A48	CS122H21-2A48	- 50318AD48	303200040	34724FR48		
	CH21-2C48	CS122H21-2C48			34724FT48		
	CH21-3A56	CS122H21-3A56			34724FR56		
	CH21-3B56	CS122H21-3B56	50318AD56	:	34724FS56	}	
	CH21-3C56	CS122H21-3C56		50320BG64	34724FT56		
	CH21-3A64	CS122H21-3A64	50318AD64	303203001	34724FR64		
	CH21-3B64	CS122H21-3B64			34724FS64		
H21	CHZ1-3C64	C5122H21~3C64			34724FT64	34705FT	34726FT
1151	CH21-2A40	CS132H21-2A40	50318AD40 50318AD48	• '	34724FR40	3 1703. 1	317231
	CH21-2C40	CS132H21-2C40		50320BG40	34724FT40		
	CH21-2A48	CS132H21-ZA48		303200010	34724FR48		
	CH21-2C48	CS132H21-2C48			34724FT48		
	CH21-3A56	CS132H21-3A56	50318AD56		34724FR56	[
	CH21-3B56	CS132H21-3B56			34724FS56]	
	CH21-3C56	CS132H21-3C56		50320BG64	34724FT56]	
	CH21-3A64	CS132H21-3A64	50318AD64	303200007	34724FR64		
	CH21-3864	CS132H21-3B64			34724FS64	_	
	CH21-3C64	CS132H21-3C64			34724FT64		




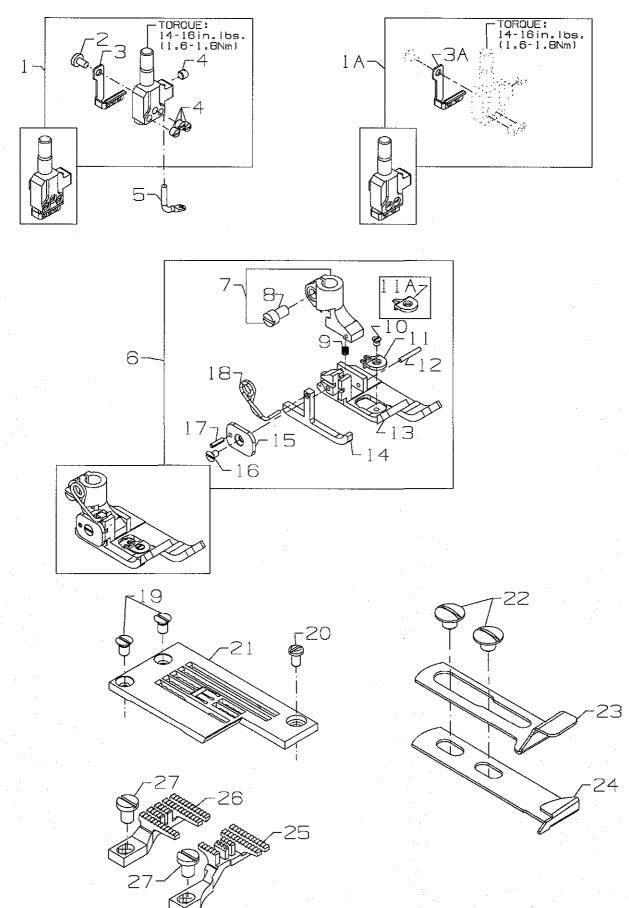

SEWING PARTS

Ref. No.	Part No.	Description	Amt. Req.
1.	50318AD64	Needle Head, for sewing comb. (see chart)	1
1A.	50318AD40	Needle Head, for sewing comb. (see chart)	
2.	SS6066440TP	Screw	_
3.	50318AE56	Eyelet	
3A.	50318AE40	Eyelet	
4	SS8080310TP	Screw	
5.	50392G	Needle Thread Eyelet	
6.		Presser Foot Assembly, for sewing comb. (see chart)	
7.	G57730GB	Presser Foot Shank	
8.	91	Screw	
9.	39568J	Spring	
10.	22716A	Screw	
11.	50397A16	Stitch Tongue	-
1 I A.	50397C	Stitch Tongue	
12.	6-25-1.5mm	Drill Rod	
13.	50330DU64	Presser Foot Bottom	
14.	34730AT	Yielding Section	
15.	G57730GC	Plate	
16.	22716	Screw	
17	96651	Roll Pin	
18	G57730GD	Spring	
19.	87	Screw, for throat plate	
20.	22768	Screw, for throat plate	-
21.	22700	Throat Plate, for sewing comb. (see chart)	 1
22.	22730	Screw	
23.	34703F2	Hemming Guide	
24.	34703FZ 34703FT	Hemmer	
24. 25.	34703FI 34726FT	Differential Feed Dog	
26.	34726FT 34705FT	Main Feed Dog	
ZQ.	3470311	Corow for food dogs	



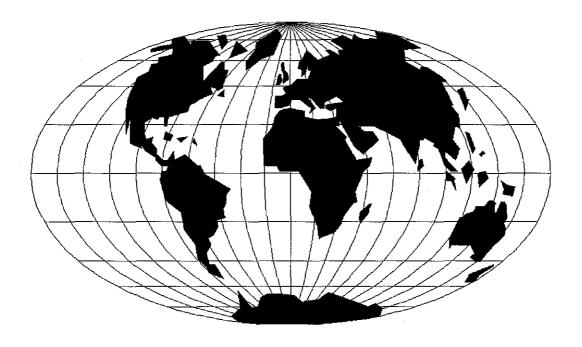

WORLDWIDE SALES AND SERVICE

Union Special Corporation maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special Corporation representatives and service technicians are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a qualified representative to serve your

Corporate Office:

One Union Special Plaza Huntley, IL 60142 Phone: 847+669+5101

Fax: 847+669+4454

European Distribution Center:

Union Special GmbH Raiffeisenstrasse 3

D-71696 Möglingen, Germany

Tel: 49 • 07 14 1 • 247 • 0 Fax: 49 • 07 14 1 • 247 • 100 Brussels, Belgium
Charlotte, N.C.
El Paso, TX
Hong Kong, China
Huntley, IL
Leicester, England
Lille, France
Miami, FL
Milan, Italy
Möglingen, Germany
Montreal, Quebec
Osaka, Japan
Santa Fe Springs, CA

Other Representatives throughout all parts of the world.



