



- 9101 - 9124  
**SHAFT, CAM WHEEL, SHUTTLE  
DRIVING LEVER, PULLEY  
WHEEL AND SHUTTLE DRIVING  
LEVER CONNECTING ROD  
ASSEMBLY**
- 9101 Shuttle Driving Cam and Gear.  
9102 Shaft.  
9103 Pin.  
9104 Gear.  
9105 Shuttle Driving Cam.  
9106 Screw.  
9107 Needle Bar Cam and Pulley Wheel.  
9108 Feed Motion Cam Wheel.  
9109 Cam Wheel Pin.  
9110 Roller.  
9111 Shaft Bushing.  
9112 Roller Pin.  
9113 Roller and Stud.  
9114 Bearing Screw.  
9115 Shuttle Driving Lever.  
9116 Eccentric Stud Nut.  
9117 Cam and Pulley Wheel Set Screw.  
9118 Shuttle Driving Lever Connecting Rod Complete, Nos.
- 9213 Cup (release).  
9214 Disc (2).  
9215 Washer (leather).  
9216 Friction Spring Pin.  
9217 Head of Machine.  
9218 Thread Guide Pin (side).  
9219 Head Revolving Bush Stop  
Thumb Screw.  
9220 Adjusting Stud (side).  
9221 Disc (2).  
9222 Tension (side) Spring.  
9223 Head Binding Screw (4).  
9224 Slide Rod Lock Nut (upper).  
9225 Foot Bar Revolving Joint Bearing.  
9226 Hinge Pin.  
9227 Lock Nut (lower).  
9228 Slide Rod.  
9229 Lifter.  
9230 Hinge Screw.
- 9301 - 9325  
**ARM SIDE COVERS, SHUTTLE  
DRIVING AND LIFTING LEVERS**
- 9301 Stud Nut.  
9302 Spring.  
9303 Spring Stud.  
9304 Needle Bar Driving Lever.  
9305 Spring Stead Pin.  
9306 Spool Pin.  
9307 Cam Roller and Stud.  
9308 Joint Pin.  
9309 Oil Cup Screw.  
9310 Oil Cup with 8597 and 8695  
Spring.  
9311 Spring.  
9312 Oil Pad (cloth).  
9313 Vibrating Presser Lifting Lever  
(for medium work).
- 9314 Lifting Lever Screw.  
9315 Thumb Screw.  
9320 Arm Side Cover (back).  
9321 Hand Wheel Hub Complete, Nos.  
11663, 81869, 82008 and 82052  
for use when Hand Wheel is fitted  
on front of Machine.  
9322 Hand Wheel Shaft Gear.  
9323 Shaft.  
9324 Gear.  
9325 Hub.
- 9401 - 9422  
**CHECK LEVER AND NEEDLE  
BAR COMPLETE**
- 9401 Check Lever.  
9402 Joint Pin.  
9403 Joint Pin.  
9404 Joint Pin.  
9405 Washer Screw (2).  
9406 Head Revolving Bush Supporting  
Washer.  
9407 Check Lever Thread Take-up  
Adjusting Screw with  
Indicator complete.  
9408 Lock Nut.  
9409 Index Head.  
9410 Index Head Stop Pin.  
9411 Adjusting Screw.  
9412 Locating Plunger.  
9413 Spring.  
9414 Indicator Body.  
9415 Indicator Body Lock Nut.  
9416 Needle Bar complete.  
9417 Spring Spring (2).  
9418 Thread Tension Spring.  
9419 Needle Bar.  
9420 Needle Bar Clamp  
Screw.  
9421 Needle Clamping Screw.  
9422 Clamp Screw.
- 9501 - 9518  
**FOOT BAR AND FOOT BAR  
REVOLVING JOINT**
- 9501 Adjusting Nut.  
9502 Spring Bar.  
9503 Vibrating Presser Spring.  
9504 Foot Bar.  
9505 Collar Screw.  
9506 Spring Bar Collar.  
9507 Feeding Foot Screw.  
9508 Feeding Foot.
- 9509 Stitch Regulator Thumb Screw.  
9510 Joint Screw (2).  
9511 Roller and Stud.  
9512 Revolving Bush.  
9513 Slide Bar.  
9514 Revolving Bush Handle.  
9515 Hand Screw (2).  
9516 Bell Crank Lever.  
9517 Gib.  
9518 Stitch Regulator.
- 9601 - 1829  
**NEEDLE PLATES, GEAR BOX  
AND SHUTTLE COMPLETE**
- 9601 Needle Plate Hinge Pin.  
9602 Needle Plate (fine and medium  
needle holes).  
9603 Shuttle complete.  
9604 Bobbin.  
9605 Shuttle Body.  
9606 Tension Regulating Screw.  
9607 Tension Spring.  
9608 Shuttle.  
9609 Spring.  
9610 Spring Screw.  
9611 Gear Box.  
9612 Pinion Bushing.  
9613 Rack (short).  
9614 Pinion Screw.  
9615 Driving Pinion.  
9616 Rack (long).  
9617 Pinion Cover Plate.  
9618 Plate Screw (2).  
9619 Needle Plate (medium and coarse  
needle holes).  
9620 Following Pinion Stud  
Screw.  
9621 Gear Box Position Pin.  
9622 Releasing Lever Hinge Pin.  
9623 Releasing Lever.  
9624 Locating Plunger.  
9625 Needle Plate Hinge Pin Binding  
Screw.  
9626 Plunger Spring.  
9627 Following Pinion.  
9628 Gear Box Screw (2).  
9629 Connecting Rod Hinge Screw.
- 9701 - 9712  
**HAND WHEEL AND STOP  
MOTION COMPLETE**
- 9701 Hand Wheel and Stop Motion  
complete.  
9702 Nut.  
9703 Binding Screw (2).  
9704 Hand Wheel Stop Motion Flanged  
Bushing.  
9705 Spring.  
9706 Stop Motion Plunger.  
9707 Hand Wheel.  
9708 Plunger Thumb Nut.  
9709 Handle (wood).  
9710 Spindle.  
9711 Retaining Screw.  
9712 Plunger Stop Screw.
- 9801 - 9808  
**BOBBIN WINDER COMPLETE**
- 9801 Bobbin Winder complete.  
9802 Frame Screw.  
9803 Spindle.  
9804 Frame.  
9805 Eccentric.  
9806 Eccentric Thumb Screw.  
9807 Pulley.  
9808 Rubber Fling-  
Spindle.
- 9851 - 9863  
**ACCESSORIES**
- 9851 Oiler.  
9855 Screw Driver (machine).  
9856 Screw Driver (shuttle tension).  
9857 Machine Screw (for fastening  
Machine to Power Table) (4).  
9859 Machine Screw (for  
fastening Machine to Stand) (4).  
9863 Threading Wire.